

**PAGE 9:7**

**GO HQ SOLDERING STATIONS,  
REPLACEMENT PARTS and ACCESSORIES**

**GO HQ STANDARD SOLDERING STATION**

ADJUSTABLE BY A POTENTIOMETER WITH LED READOUT  
TEMPERATURE RANGE: 150C TO 420C  
HEATER VOLTAGE: 24VOLT  
HEATER POWER: 48WATT



**CODE:** SOLDER20  
**TRADE:\$** TBA  
**RETAIL:\$** TBA

**GO HQ DIGITAL SOLDERING STATION**

ADJUSTABLE BY A POTENTIOMETER WITH DIGITAL READOUT  
TEMPERATURE RANGE: 160C TO 480C  
HEATER VOLTAGE: 24VOLT  
HEATER POWER: 48WATT



**CODE:** SOLDER30  
**TRADE:\$** TBA  
**RETAIL:\$** TBA

**GO HQ SOLDERING STATION IRON**

REPLACEMENT SOLDERING IRON FOR SOLDER20 AND SOLDER 30  
SOLDERING STATIONS



**CODE:** SOLDERIRON  
**TRADE:\$** TBA  
**RETAIL:\$** TBA

**GO HQ SOLDERING STATION HEATING ELEMENT**

REPLACEMENT HEATING ELEMENT FOR SOLDER20 & SOLDER 30  
SOLDERING STATIONS



**CODE:** SOLDERHEATER  
**TRADE:\$** TBA  
**RETAIL:\$** TBA

**GO HQ SOLDERING STATION SPONGE**

REPLACEMENT SPONGE FOR SOLDER20 & SOLDER 30  
SOLDERING STATIONS



**CODE:** SOLDERSPONGE  
**TRADE:\$** TBA  
**RETAIL:\$** TBA

**GO HQ SOLDERING STATION TRANSFORMER**

REPLACEMENT TRANSFORMER FOR SOLDER20 & SOLDER 30  
SOLDERING STATIONS



**CODE:** SOLDERTRANS  
**TRADE:\$** TBA  
**RETAIL:\$** TBA

**GO HQ SOLDERING STATION TIP 5.3mm**

REPLACEMENT TIP FOR SOLDER20 & SOLDER 30  
SOLDERING STATIONS  
OUTER DIAMETER:5.3mm



**CODE:** SOLDERTIP1  
**TRADE:\$** TBA  
**RETAIL:\$** TBA

**GO HQ SOLDERING STATION TIP 3mm**

REPLACEMENT TIP FOR SOLDER20 & SOLDER 30  
SOLDERING STATIONS  
OUTER DIAMETER:3mm



**CODE:** SOLDERTIP2  
**TRADE:\$** TBA  
**RETAIL:\$** TBA

**GO HQ SOLDERING STATION TIP 3mm**

REPLACEMENT TIP FOR SOLDER20 & SOLDER 30  
SOLDERING STATIONS  
OUTER DIAMETER:3mm BEVELED AT 45DEG



**CODE:** SOLDERTIP3  
**TRADE:\$** TBA  
**RETAIL:\$** TBA

**GO HQ SOLDERING STATION TIP 2mm**

REPLACEMENT TIP FOR SOLDER20 & SOLDER 30  
SOLDERING STATIONS  
OUTER DIAMETER:2mm



**CODE:** SOLDERTIP4  
**TRADE:\$** TBA  
**RETAIL:\$** TBA